


REMOTE CONTROL

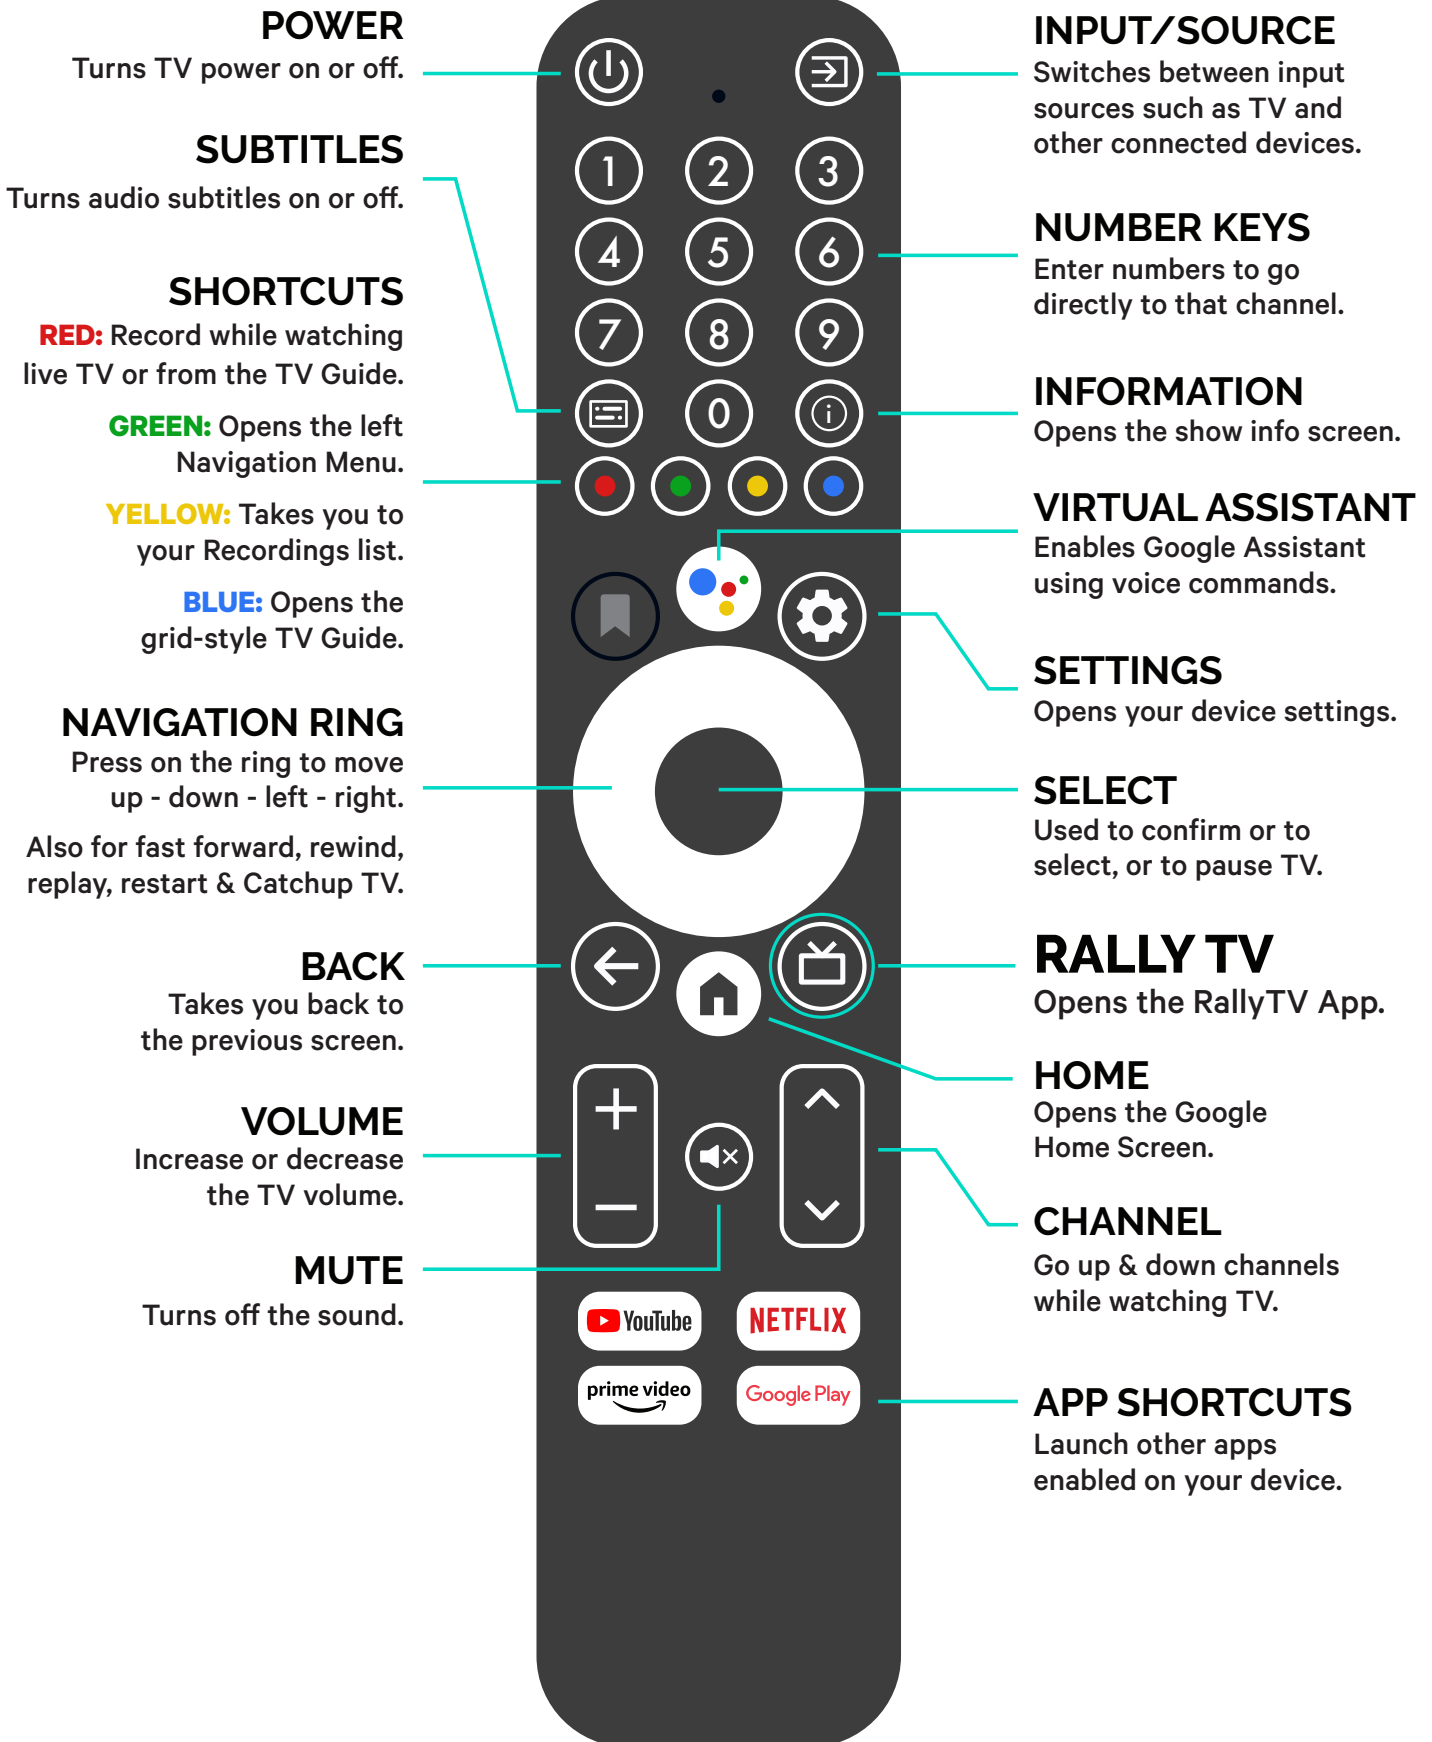

POWER

Turns TV power on or off.

SUBTITLES

Turns audio subtitles on or off.

SHORTCUTS

RED: Record while watching live TV or from the TV Guide.

GREEN: Opens the left Navigation Menu.

YELLOW: Takes you to your Recordings list.

BLUE: Opens the grid-style TV Guide.

NAVIGATION RING

Press on the ring to move up - down - left - right.

Also for fast forward, rewind, replay, restart & Catchup TV.

BACK

Takes you back to the previous screen.

VOLUME

Increase or decrease the TV volume.

MUTE

Turns off the sound.

INPUT/SOURCE

Switches between input sources such as TV and other connected devices.

NUMBER KEYS

Enter numbers to go directly to that channel.

INFORMATION

Opens the show info screen.

VIRTUAL ASSISTANT

Enables Google Assistant using voice commands.

SETTINGS

Opens your device settings.

SELECT

Used to confirm or to select, or to pause TV.

RALLY TV

Opens the RallyTV App.

HOME

Opens the Google Home Screen.

CHANNEL

Go up & down channels while watching TV.

APP SHORTCUTS

Launch other apps enabled on your device.